



DATA ENTRY

- Select Enter sample.
- Scan the QR code, which is attached to your machine. If the scan is unsuccessful, you will receive an error message. Please try it again.
- Select the concerning component of the machine.
- Scan the barcode (laboratory number) of your sample form. If the scan fails, you are also able to enter the number manually. You will find the laboratory number on the bottom left and center as well as on the top right of your sample form.
- Complete the missing data.
- Confirm by submit. Your data will now be transmitted to OELCHECK.





PERSONAL LOGIN:

Zeit sparen! QR-Code scannen, Probe online eingeben www.lab.report
Save time! Scan QR-Code, enter sample data online
 Angaben zur Probe erfolgten online Sample information provided online

Mark with a cross top left on the sample information form: **Sample information provided online.**

Stick the barcode from the sample information form on the sample bottle and send us your sample.

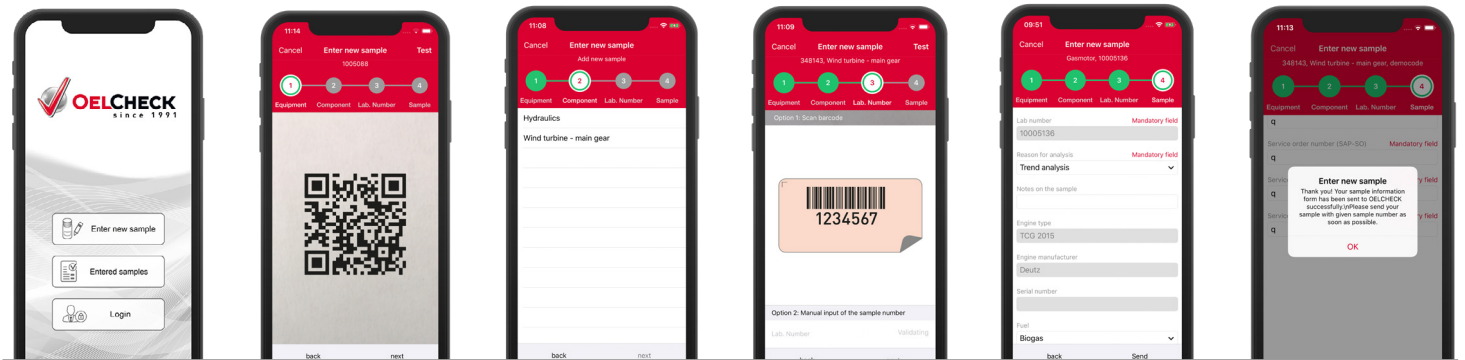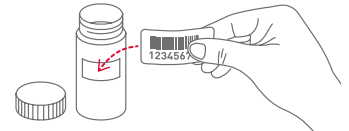

FEATURES IN THE LOGIN AREA



USE OFFLINE-MODE

If you enter the data offline, it will be transferred as soon as you are online again.



ADD PHOTOS TO THE SAMPLE

You can add up to five photos to a sample.



VIEW SAMPLE STATUS

You can view the status of your samples entered with the device in the "entered samples".



VIEW LABORATORY REPORTS

You can call up the last laboratory reports of your sample entered with the device in the "entered samples" area.




INFORMATION SYMBOL

The information symbol at the top right shows you the current version of the app and when your data was synchronized the last time.



IF YOU HAVE NO QR CODE YET

- We would be happy to assist you with the implementation: Call us on Phone **+49 (0) 8034-9047-250** or send us an Email: sales@oelcheck.de